

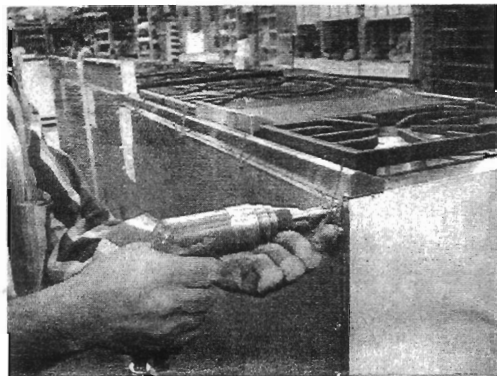
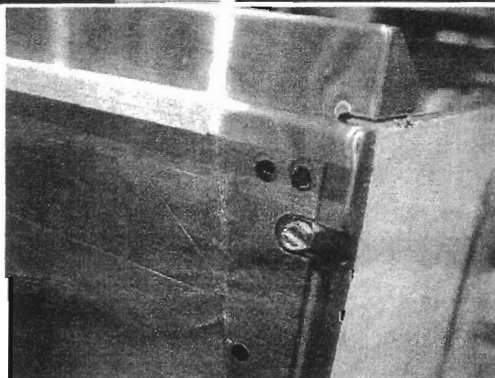


Installing Rear Island Trim

1. Begin by unscrewing the 6 screws located on the upper portion of the back panel.

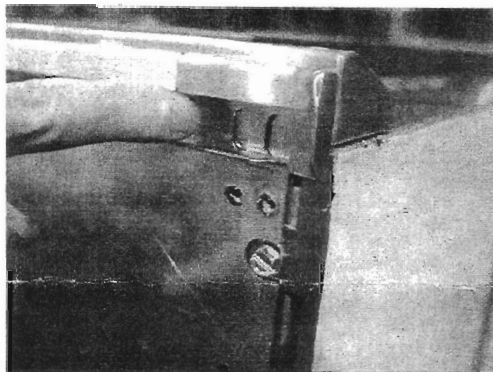

2. Slide the rear island trim between the back panel and existing island back. The holes on the trim will align with the holes of the 6 screws you removed.

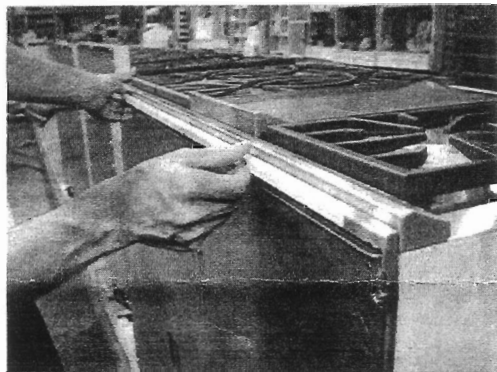

3. Secure back panel and rear island trim using the same screws you removed.